

English

Universal Motor Clipper Instruction Manual

• *For Commercial Use Only* •

For Model Numbers:

78005

76097

76076

76111

78015

78705

78715



OsterTM
Professional Products

IMPORTANT SAFEGUARDS

COMMERCIAL CLIPPER

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all Instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Always unplug this appliance from the electrical outlet immediately after using.
6. Unplug this appliance before cleaning, putting on or taking off parts.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when it is plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

5. Keep cord away from heated surfaces.
6. Never operate the appliance when air openings are blocked or while on a soft surface (such as a bed or couch).
7. Never drop or insert any object into opening.
8. Do not use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.
9. Do not use this appliance with a damaged or broken comb or blade, as cut or scratched skin may occur.
10. To disconnect, move all controls to "OFF", then remove plug from outlet.
11. Do not wrap cord around unit when storing. Continuous stress on the cord can damage cord insulation and result in a shock hazard.
12. Avoid contact with moving blades.
13. Avoid tangling or kinking the cord while clipping. Should the cord become tangled or kinked, stop clipping and straighten the cord.
14. This appliance is for clipping and trimming purposes only.
15. Keep the appliance dry.
16. The intended continuous operating time is 20 minutes.
17. During use, do not place or leave the appliance where it is expected to:
 - 1) subject to damage by animal, or
 - 2) exposed to weather.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

OPERATE ON VOLTAGE SPECIFIED ON CLIPPER

DO NOT USE THIS CLIPPER UNTIL YOU HAVE READ THESE OPERATING INSTRUCTIONS

OPERATING THE UNIT

Always apply one to two drops of the provided blade lubricant or other Oster approved lubricant to the blades before use.

Cutting efficiency may drop and the blades and motor may be damaged if hair is dirty or hair styling agents have been applied. Always ensure that hair is clean before using the clipper.

1. Turn the clipper on using the "on-Off" switch located on the top of the unit and use the clipper.
2. Turn the clipper off when finished using.
3. Cover the blades with the provided blade guard to protect the blades.
4. Unplug unit after use and store properly.

User-Maintenance Instructions.

1. The product is for commercial use.
2. Keep cord straight while clipping. If cord becomes kinked or tangled, stop clipping and straighten it.
3. Do not wrap cord around the clipper when storing. This can damage the cord insulation.
4. Always take care not to tangle the cord while using or storing the clipper.
5. We recommend storing the clipper and cord in the original carton when not in use.

GREASING

Over-greasing can cause leakage and reduce the operating efficiency of the clipper. Check once a month by removing metal nameplate. Then remove nylon lever, metal link, and gear. Insert grease tube nozzle into hole on top of Gear post. (Note: If grease does not come through, clean holes.) DO NOT FILL CAVITY WITH GREASE. Now replace Link & Gear and add very little grease to teeth of Gear & Linkage. Use only Oster™ Electric Clipper Grease. This grease is required in double insulated clippers because of its insulative properties.

CAUTION: ADD VERY LITTLE GREASE AND ONLY WHEN NECESSARY.

CARBON BRUSHES

Brushes must be inspected and replaced periodically to insure maximum motor performance and life expectancy. UNPLUG THE CLIPPER FROM THE POWER OUTLET TO PREVENT AN ELECTRIC SHOCK WHEN INSPECTING OR REPLACING BRUSHES. To remove a brush on models with a SLOTTED BRUSH CAP, unscrew the brush cap (a dime is an excellent tool for this) and remove the nylon insulator cap. Remove the brass cap by applying slight pressure to the side of the cap with a fingernail in a picking fashion. Remove the brush and spring assembly and compare the length of the round and square sections of the brush. When the square section has been reduced to the length of the round section, the brush must be replaced to prevent possible damage to the motor armature. Always replace the brushes as a set of 2 brushes even though only one may be at or below the required length. When reinstalling the brush, make certain that the sharp corners on the brush are aligned with the triangular notches in the brass cap and then the nylon cap over the brush spring – pressing down to seat the brass cap into the brush tube. Replace the slotted outer cap and screw down tightly to prevent loosening.

USE OSTER™ BRUSHES

Avoid substitutes. Brushes used in electric motors are carefully selected for size and grade to obtain maximum, trouble free performance. When ordering carbon brushes, specify model number and voltage of clipper.

BLADE SHARPENING

Oster™ cutting blades are of individual hollow-ground design, hardened to extend cutting life. As with any cutting instrument, the cutting edges will become dull with usage. Increasing blade tension to force dull blades to cut can cause the clipper to heat and reduce motor life, and further shorten blade life. When the cutting blades no longer cut smooth and clean, sharpening is necessary.

When sharpening blades becomes necessary, send blades to an Authorized Service Center where approved methods, equipment and proper knowledge are used to restore the original hollow-ground design and best cutting ability. Sharpening blades by flat grinding or any method contrary to the design and construction of Oster™ cutting blades is not recommended.


REMOVING OR REPLACING BLADES

TO REMOVE:

IMPORTANT! STOP MOTOR; lift blade away from clipper and slide of tongue.

TO REPLACE:

Turn motor on; insert blade on tongue fully then snap blade into place.

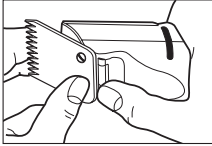

LUBRICATING THE BLADES


A light film of oil should be maintained on the surface of the cutting blades. Oiling the blades frequently while in use will help keep the blades cleaner. Clean blades cut better. To clean blades, dip the teeth into Oster™ Blade Wash cleaner with the clipper running. DO NOT IMMERSE THE CLIPPER. Remove from the mixture and, while holding the clipper with the blade end down, wipe the blades dry with a clean, dry cloth. Re-oil blades.

WARRANTY INFORMATION

SERVICING OF A DOUBLE INSULATED APPLIANCE

In a double insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added. Servicing a double-insulated appliance requires extreme care and knowledge of the system and should be done only by qualified service personnel.

Replacement parts must be identical to those parts being replaced.

 A double-insulated appliance is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED." The symbol may also be marked on the appliance.

MAINTENANCE AND STORAGE

NOTE: Any other maintenance not explained in this manual should be performed by an Authorized Service Center. To store unit, coil and place in original carton.

WARNING When using or cleaning this clipper, do not use any aerosol sprays or blade washes, especially those containing methylene chloride, dimethyl benzyl ammonium chloride, or 1-1-1



trichloroethylene. Damage caused by these chemicals will void your warranty. You may use Oster™ Blade Wash, Oster™ Blade Lube and Oster™ 5 in 1 Clipper Blade Care which do not harm the product.

Disposal in E.U. countries



Do not dispose of the appliance with domestic refuse. As part of the E.U. Directive governing the disposal of electric and electronic appliances, the appliance is accepted free of charge by local waste collection points or recycling centers. Correct disposal will ensure environment protection and prevent a potential harmful impact on people and the environment.

Disposal in non-E.U. countries

Please dispose of the appliance at the end of service life in an environmentally friendly manner, per applicable local and national laws and regulations.

SERVICE INFORMATION

How and Where to Get Service

INFORMATION • DO NOT DESTROY • READ CAREFULLY

The foundation of our business has been built upon the principle of service to the user, both in designing superior products and in keeping them in condition to give long-lasting use. That is why we back up our reputation for manufacturing top-quality products by providing the finest service facilities possible for adjustment and repairs, when necessary. Please retain the original packaging materials and carton, if possible, to facilitate the packaging of the product if service is required.

HOW TO GET SERVICE WHEN YOU NEED IT

To locate your closest distributor, please go to: WWW.OSTERPRO.COM

- Once you have located a Service Station, take your product there. To make packaging the product easier, use the original packaging materials and carton if you have them.
- If it is necessary to ship the unit to the Service Station:
 - Pack it carefully in a good carton with plenty of crumpled paper or other padding around it. Tape or tie the carton securely.
 - The warranty does not cover damage in transit. Carefully address the package to the nearest Service Station. Don't forget your name and return address, including postal zip code.
 - Your Post Office will tell you the proper amount of postage and can insure the package against loss.
- If returning a clipper, include blades.
- When ordering Parts or Accessories specify the Service number (or Model No. and the Series Letter) indicated on your product.

LIMITED WARRANTY

This product is warranted for one year from date of purchase to be free of mechanical and electrical defects in material and workmanship. The manufacturer's obligation hereunder is limited to repairing such products during the warranty period, provided the product is sent prepaid to an Authorized Service Station. This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product, normal wear and tear, damage, Acts of God, use on improper voltage or current, use contrary to operating instructions, or disassembly, repair or alteration by any person other than an Authorized Service Station. All warranties and implied warranties on Oster™ clippers are considered null and void if product failures occur as a result of using after market components, such as gear train components, levers, unsuitable blades, electric power boosters and other such components and devices. Return of the Owner Registration Card is not required

for warranty coverage. This warranty gives you specific legal rights and you may also have other rights which vary from state to state, province to province or jurisdiction to jurisdiction. No other warranty is provided and to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited to the duration of this warranty and the company shall not be responsible for incidental or consequential damages.

If your appliance includes a country-specific guarantee or warranty insert please refer to the terms and conditions of such guarantee or warranty in place of this guarantee or contact your local authorized dealer for more information.

In accordance with the European Directives on Low Voltage (73/23/EEC as amended by 93/68/EEC) and Electromagnetic Compatibility (89/336/EEC as amended by 93/68/EEC), the CE-marking has been affixed on the equipment. The following importer and distributor keeps the conformity declaration on file: Oster GmbH, Am Eisernen Steg 20, D-65795 Hattersheim am Main, Germany, info@oster-europe.com, phone +49 (0) 6190-93443-0.

**Para fins de assistência, contactar:
Europa, África e Médio Oriente:
Oster GmbH
info@oster-europe.com
+49 (0) 6190-93443-0**

**Para obter a indicação do distribuidor Oster™ local autorizado
Visite as nossas páginas da Web em.**

**WWW.OSTERSTYLE.COM
WWW.OSTERPRO.COM**

Oster™
Professional Products

© 2012 Sunbeam Products, Inc. operando sob o nome de Jarden Consumer Solutions. Todos os direitos reservados. Distribuído pela Sunbeam Products, Inc. operando sob o nome de Jarden Consumer Solutions, Miami, Florida 33126. Impresso nos EUA